

Wall Plaque Mounting Instructions

Parts Included:


- A) Address Plaque
- B) #8 x 1.0-in. Wall Screws

You may need the following (not included):

- 1) Pencil
- 2) Level
- 3) Drill
- 4) 1/8" Drill Bit
- 5) Hammer
- 6) Phillips Screw Driver
- 7) Masonry Anchors
- 8) Masonry bit for Anchors
- 9) Longer #8 or #10 Screws

How to attach to your home:

- 1) Place your new address plaque (A) up against the wall in the desired location, check for level and mark the wall in the mounting hole locations.
- 2) If the mounting surface is wood or wood covered with siding, use a drill and 1/8" drill bit to drill a pilot hole at each hole location. If the mounting surface is masonry please see recommendations below.
- 3) Using the wall screws (B) provided and screw driver, secure the address plaque (A) to the wall. Note: if the house siding is too thick or layered over foam board insulation, longer #8 screws (not provided) may be required.

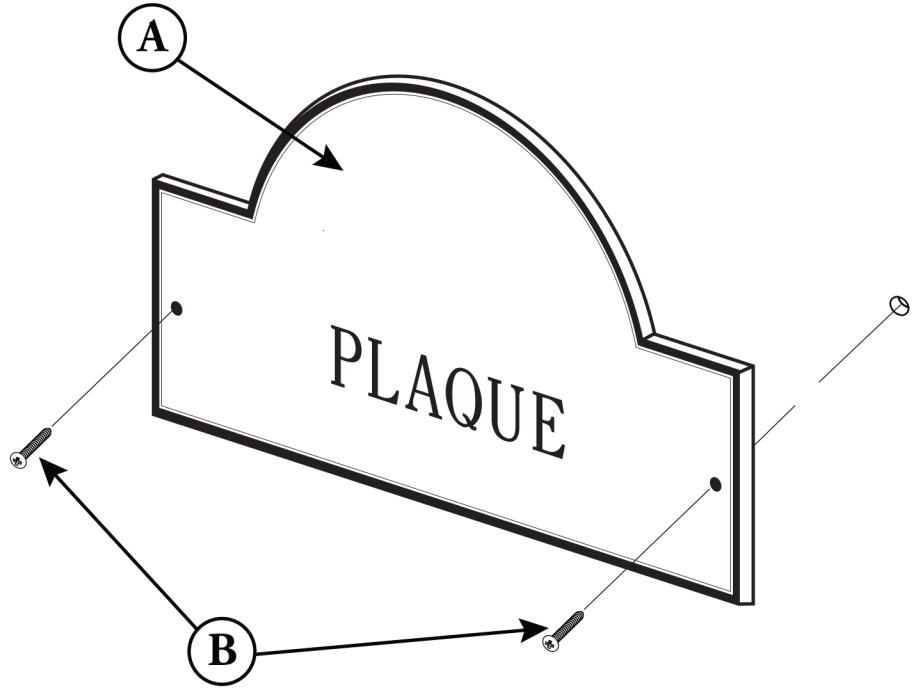

Masonry Recommendations:

When attaching your address plaque to brick, block, or cultured/faux stone walls it will be necessary to purchase the appropriate anchors for your mounting surface. For most brick or block applications, a standard plastic wall anchor for a #8 screw can be used in conjunction with the provided #8 screws. An appropriately sized masonry bit will also be needed to drill the holes for the anchors.

Cleaning Instructions:

Your new address plaque is made of hand-cast aluminum with tough Alumi-Shield™ finishes to withstand the environment and should retain its appearance for many years. However chemicals, solvents and salts can harm the finish. It is important to clean the plaque of any harmful elements including salt deposits from salt air climates or salt treated roads and walkways. To clean this product, use a non-abrasive detergent and water with a cloth, sponge, or soft brush. Note: the simulated metal finishes cannot be brightened by polishing.